






BWC
KITCHEN & BATH













Cabinet Assembly **INSTRUCTIONS**








Base Cabinet





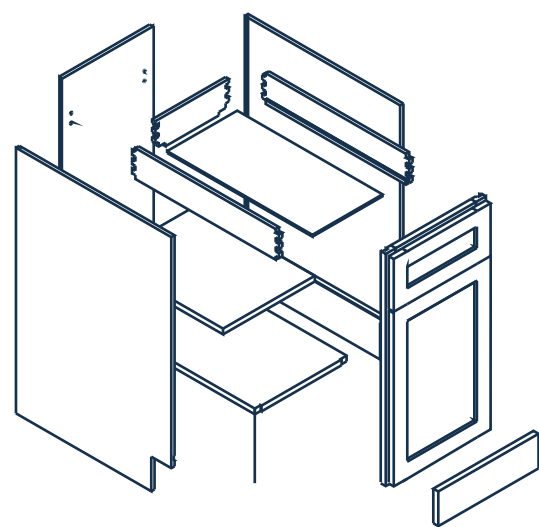
Required				
<p>GLIDES</p> 	<p>MET AL BRACKETS</p> 	<p>SCREWS</p> 	<p>SHELF CLIPS</p> 	<p>GLIDE SUPPORTS</p> 
Tools		Optional		
<p>POWER DRILL</p> 	<p>RUBBER MALLET</p> 	<p>WOOD GLUE</p> 	<p>NAIL GUN</p> 	<p>STAPLER</p> 

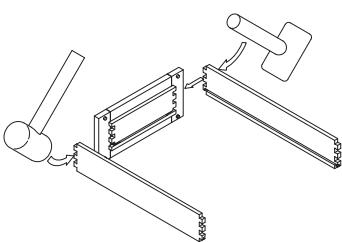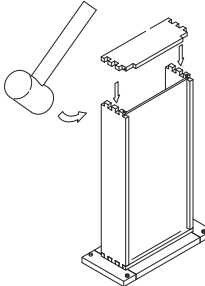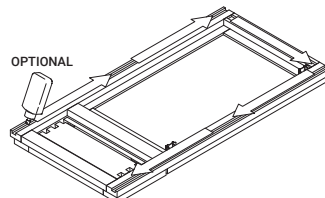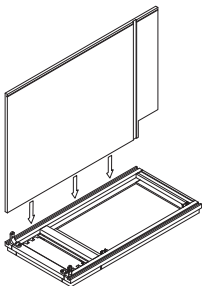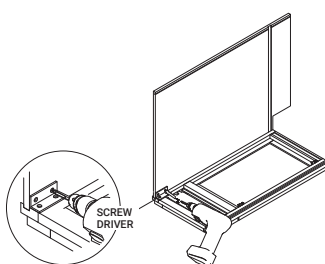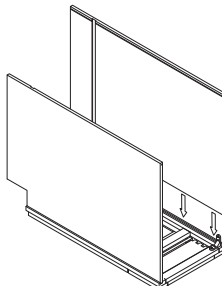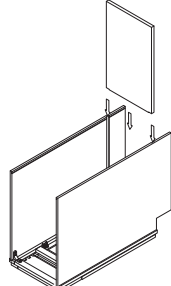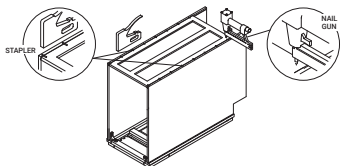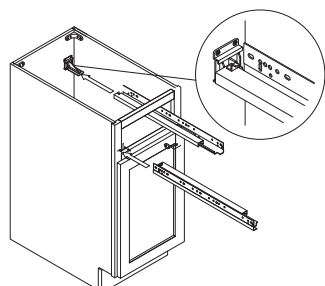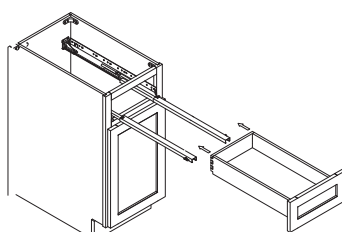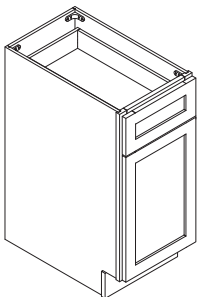














 <p>STEP 01</p>	 <p>STEP 02</p>	 <p>STEP 03</p>	 <p>STEP 04</p>
 <p>STEP 05</p>	 <p>STEP 06</p>	 <p>STEP 07</p>	 <p>STEP 08</p>
 <p>STEP 09</p>	 <p>STEP 10</p>	 <p>STEP 11</p>	 <p>STEP 12</p>

Lazy Susan Cabinet

GLIDES 	MET AL BRACKETS 	Required SCREWS 	SHELF CLIPS 	GLIDE SUPPORTS 
---	---	---	---	--


Tools	Optional
 POWER DRILL	 RUBBER MALLET
 WOOD GLUE	 NAIL GUN
	 STAPLER

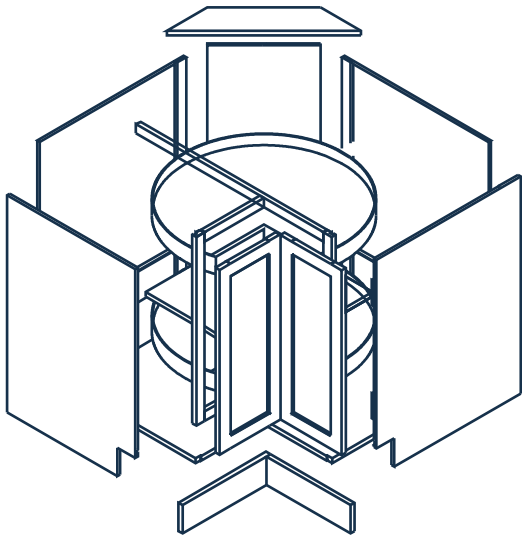

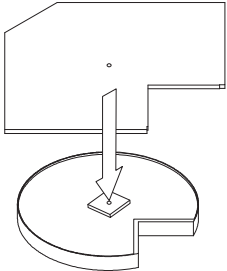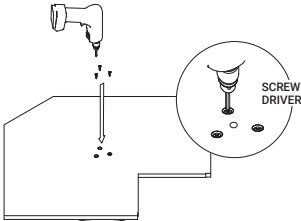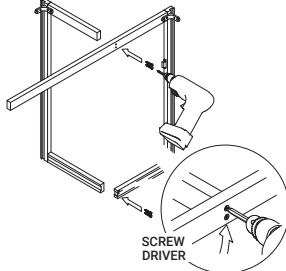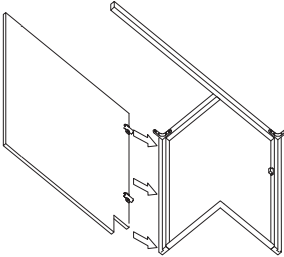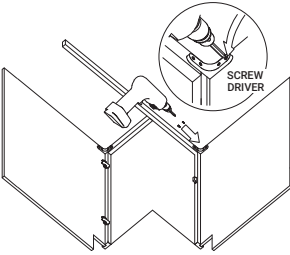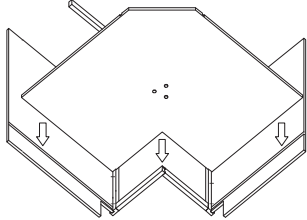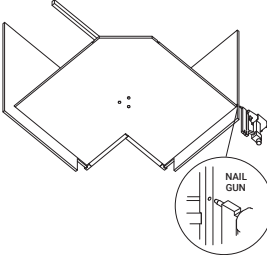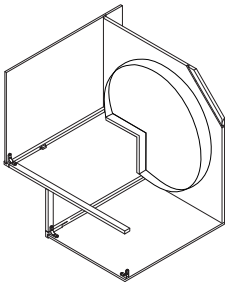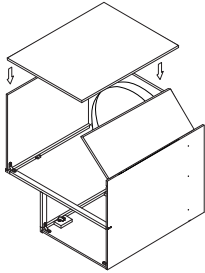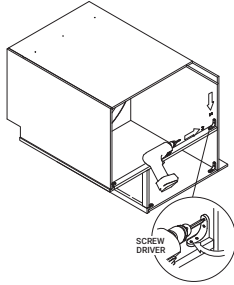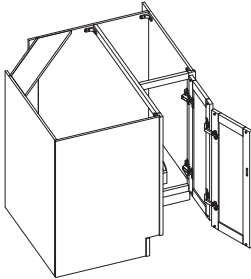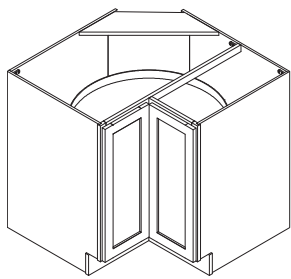 <p>STEP 01</p>	 <p>STEP 02</p>	 <p>STEP 03</p>	 <p>STEP 04</p>
 <p>STEP 05</p>	 <p>STEP 06</p>	 <p>STEP 07</p>	 <p>STEP 08</p>
 <p>STEP 09</p>	 <p>STEP 10</p>	 <p>STEP 11</p>	 <p>STEP 12</p>








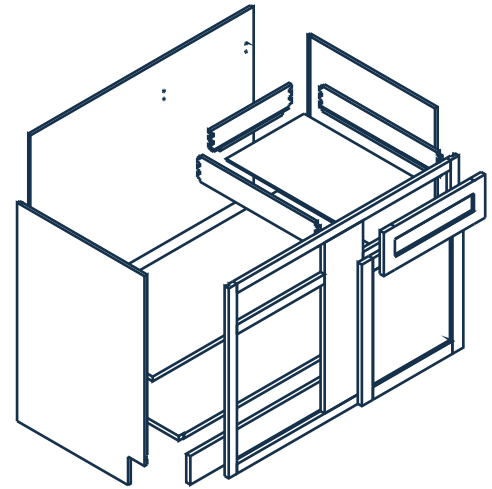


Blind Corner Base Cabinet


<p>GLIDES</p>	<p>MET AL BRACKETS</p>	<p>Required</p> <p>SCREWS</p>	<p>SHELF CLIPS</p>	<p>GLIDE SUPPORTS</p>
<p>Tools</p> <p>POWER DRILL</p> <p>RUBBER MALLET</p>		<p>Optional</p> <p>WOOD GLUE</p> <p>NAIL GUN</p> <p>STAPLER</p>		















<p>STEP 01</p>	<p>STEP 02</p>	<p>STEP 03</p>	<p>STEP 04</p>
<p>STEP 05</p>	<p>STEP 06</p>	<p>STEP 07</p>	<p>STEP 08</p>
<p>STEP 09</p>	<p>STEP 10</p>	<p>STEP 11</p>	<p>STEP 12</p>

Base 3 Drawers

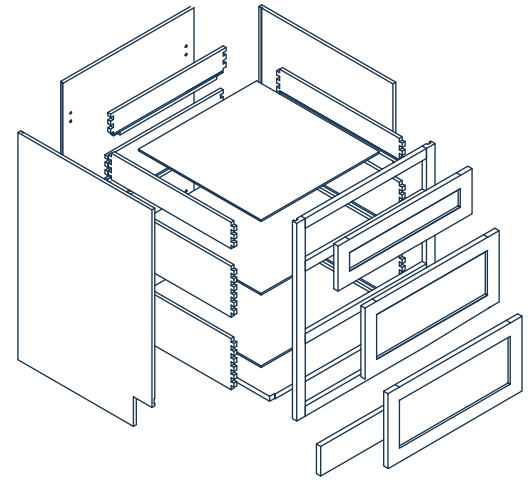
Required				
<p>GLIDES</p> 	<p>MET AL BRACKETS</p> 	<p>SCREWS</p> 	<p>SHELF CLIPS</p> 	<p>GLIDE SUPPORTS</p> 
Tools		Optional		
 <p>POWER DRILL</p>	 <p>RUBBER MALLET</p>	 <p>WOOD GLUE</p>	 <p>NAIL GUN</p>	 <p>STAPLER</p>

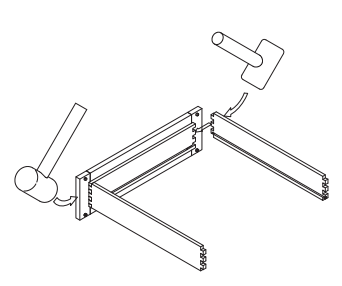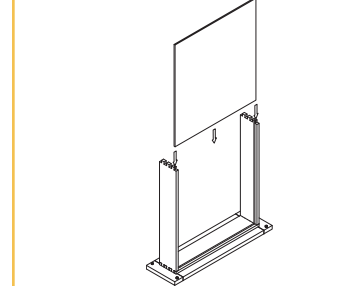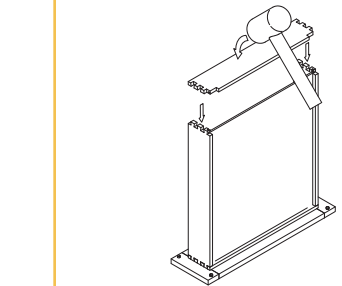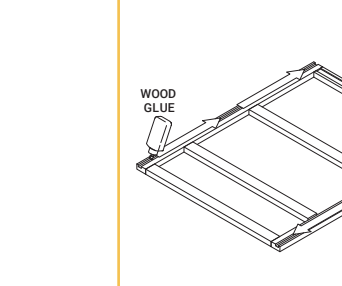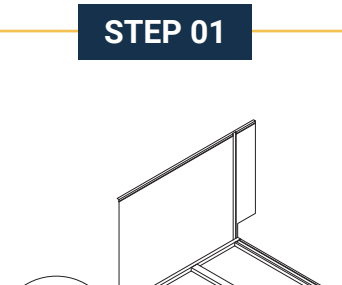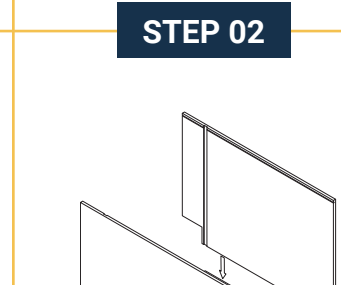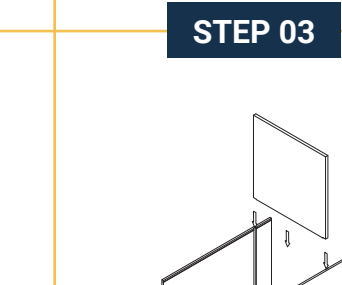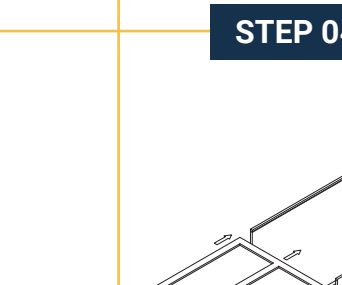

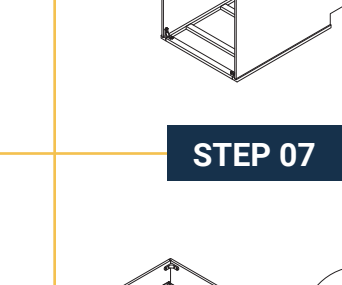
 <p>STEP 01</p>	 <p>STEP 02</p>	 <p>STEP 03</p>	 <p>STEP 04</p>
 <p>STEP 05</p>	 <p>STEP 06</p>	 <p>STEP 07</p>	 <p>STEP 08</p>
 <p>STEP 09</p>	 <p>STEP 10</p>	 <p>STEP 11</p>	 <p>STEP 12</p>

Wall Cabinet



Required

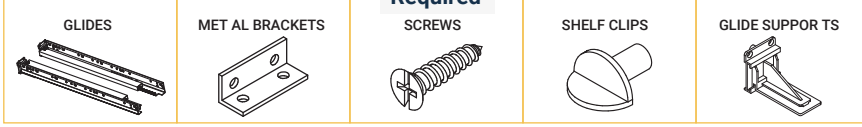





Tools

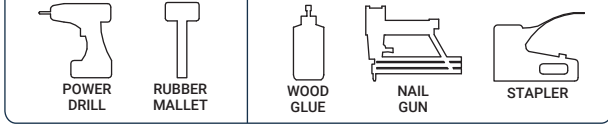


Optional

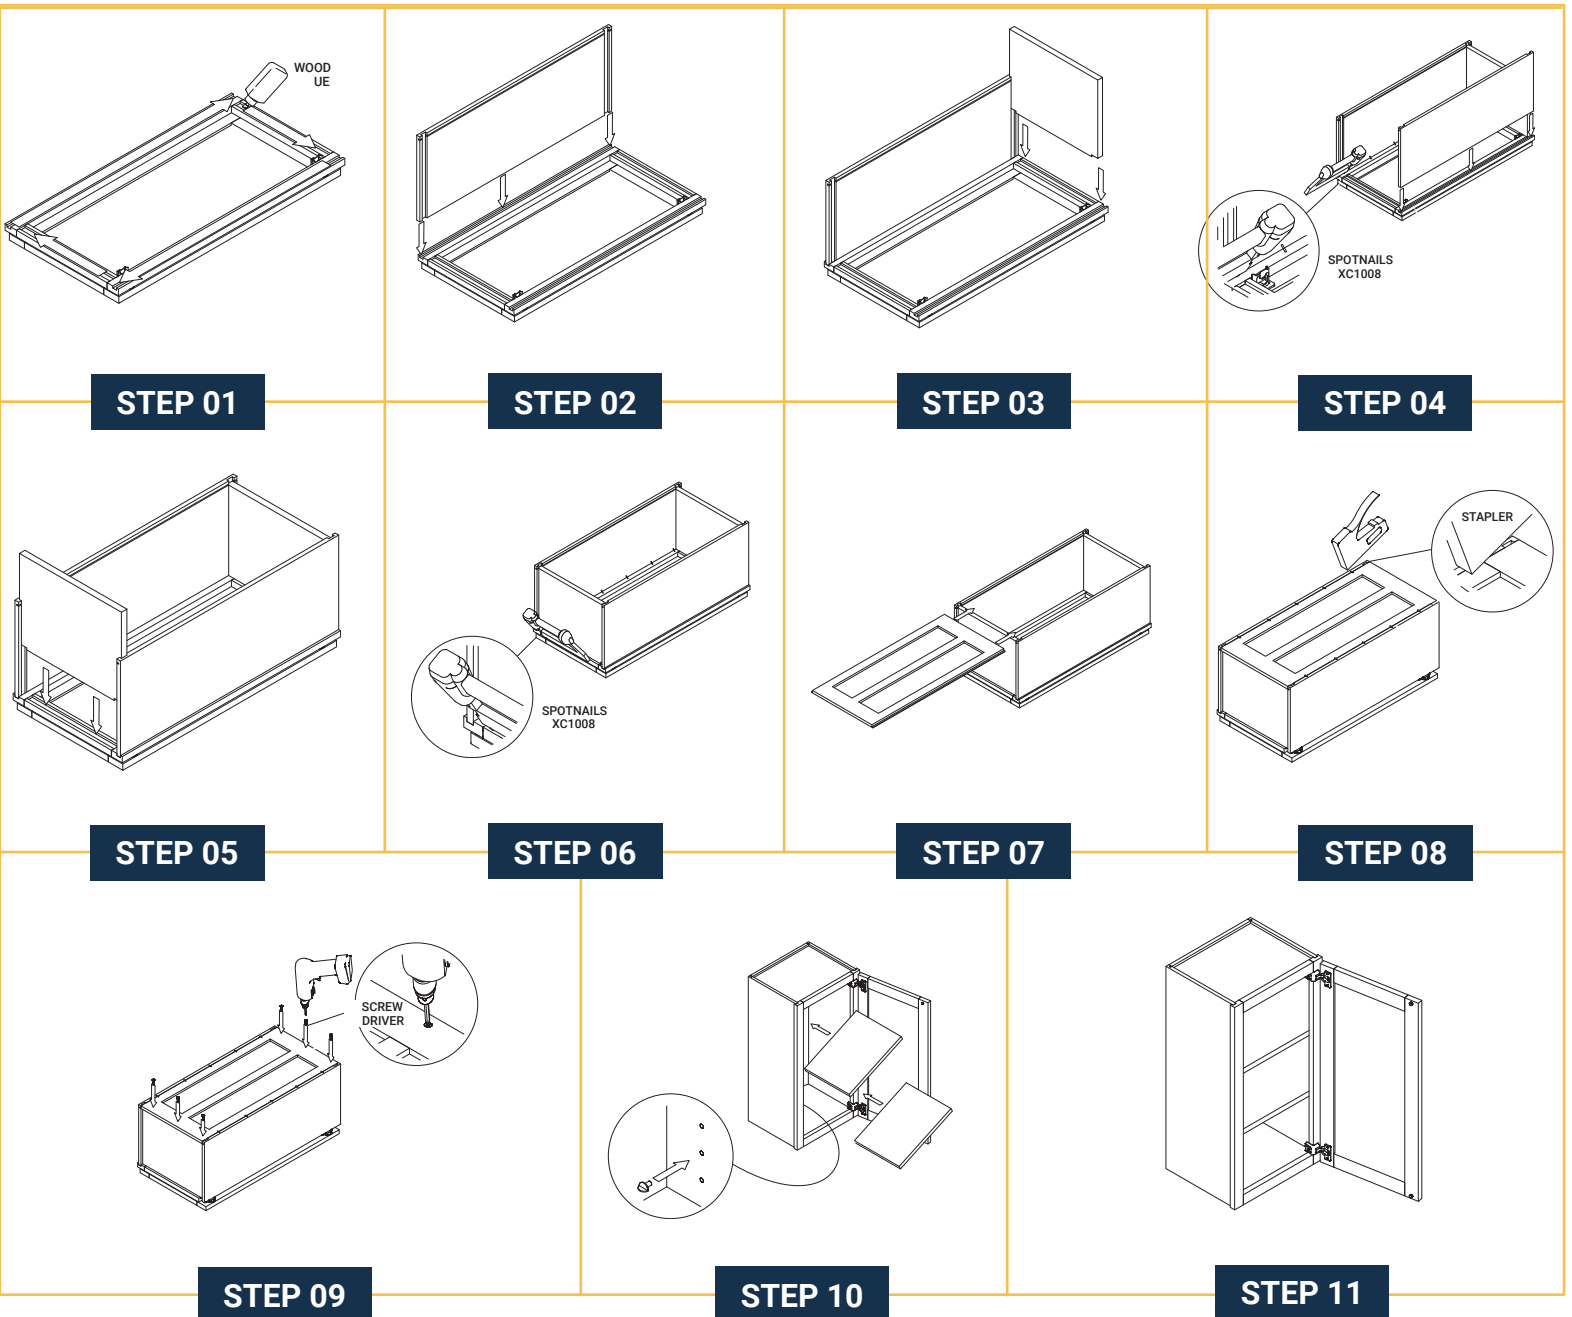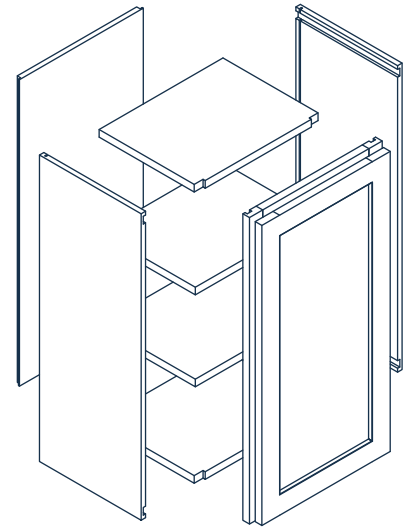


Wall Diagonal Corner Cabinet

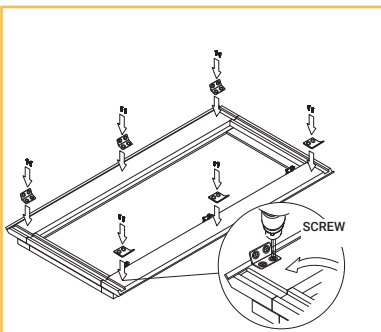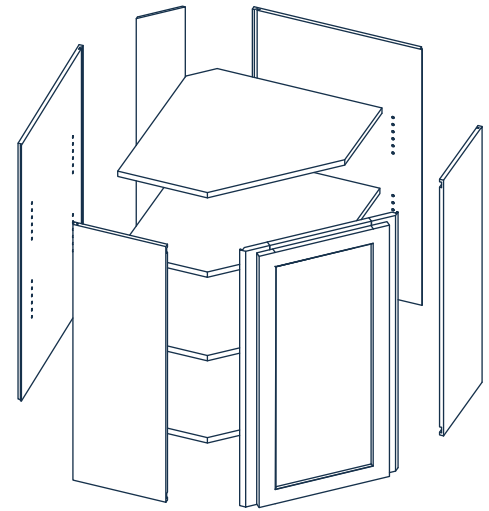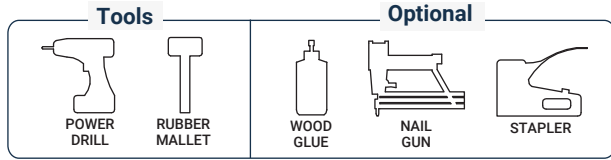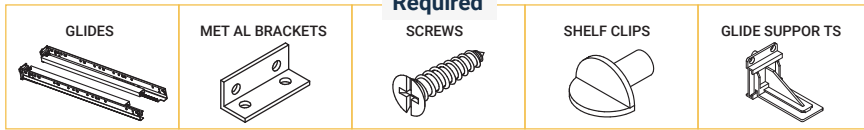


STEP 01

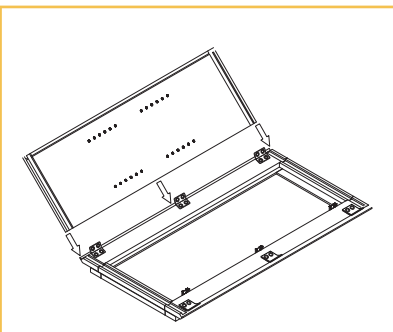


STEP 02

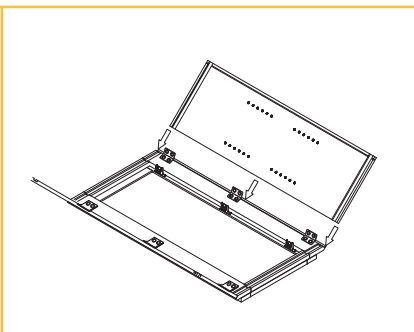


STEP 03

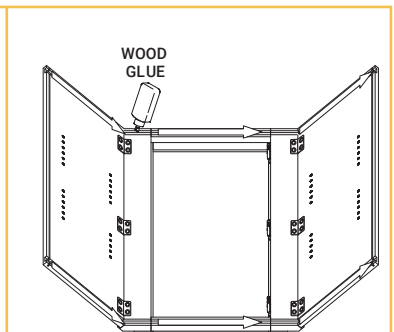


STEP 04

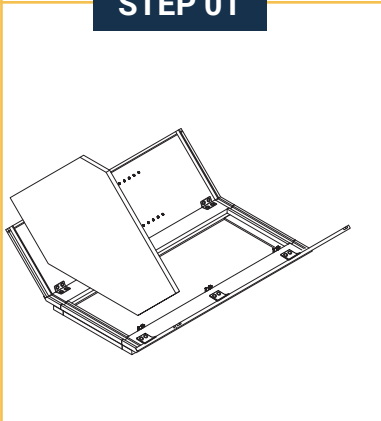


STEP 05

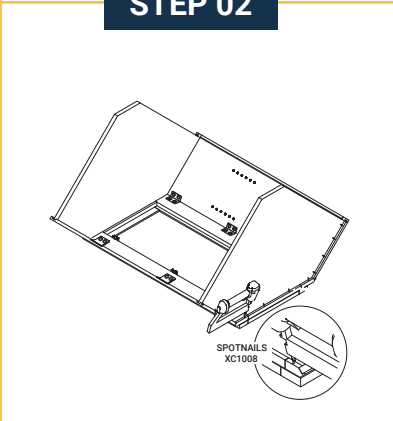

STEP 06

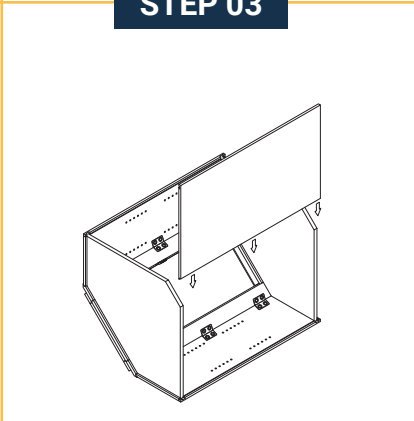


STEP 07

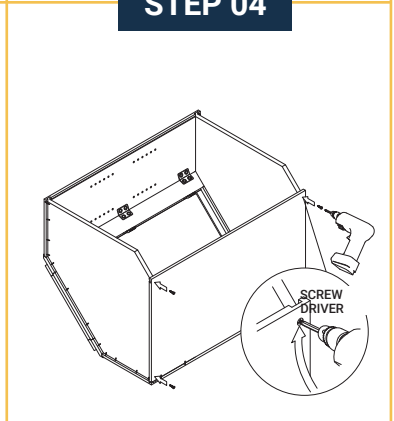


STEP 08



STEP 09

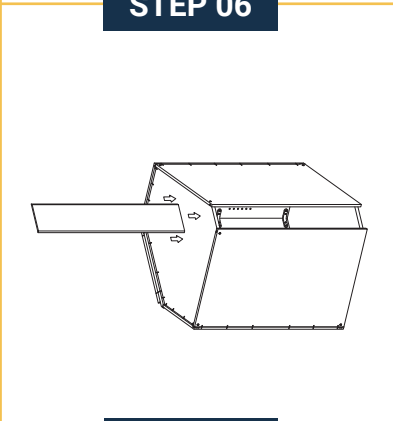

STEP 10

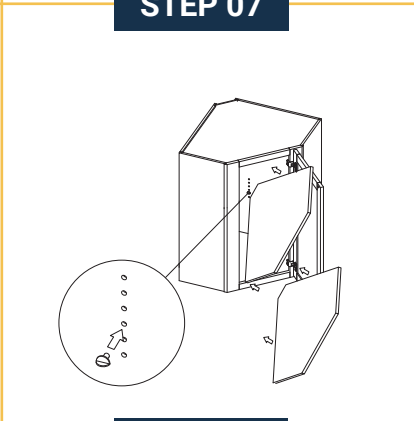






STEP 11



STEP 12

Tall Pantry

Required



<p>GLIDES</p> 	<p>MET AL BRACKETS</p> 	<p>SCREWS</p> 	<p>SHELF CLIPS</p> 	<p>GLIDE SUPPORTS</p> 
--	--	---	--	---

Tools


 <p>POWER DRILL</p>	 <p>RUBBER MALLET</p>
--	--

Optional


 <p>WOOD GLUE</p>	 <p>NAIL GUN</p>	 <p>STAPLER</p>
--	---	--

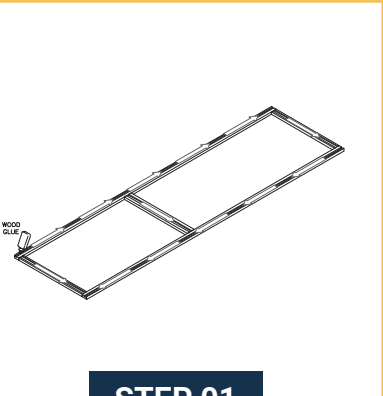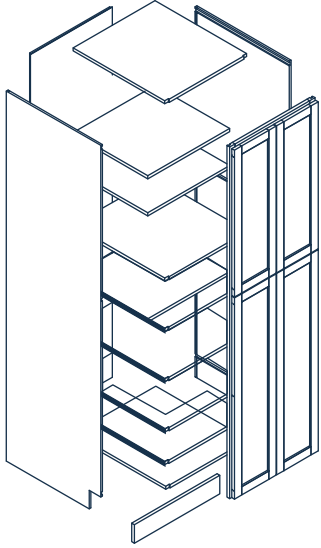


STEP 01

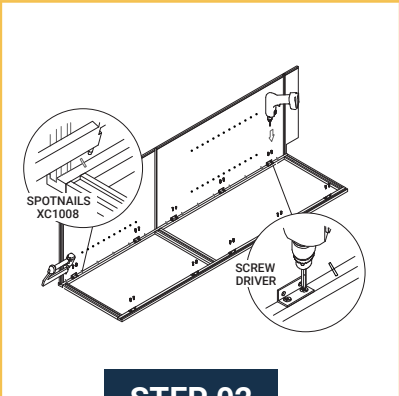


STEP 02

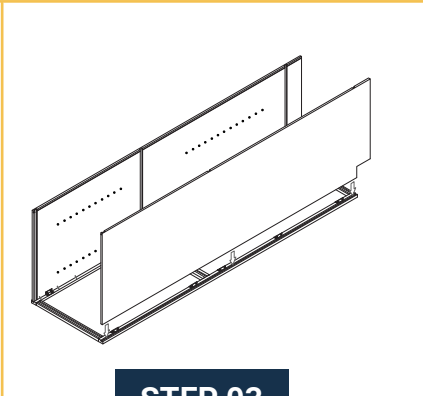


STEP 03

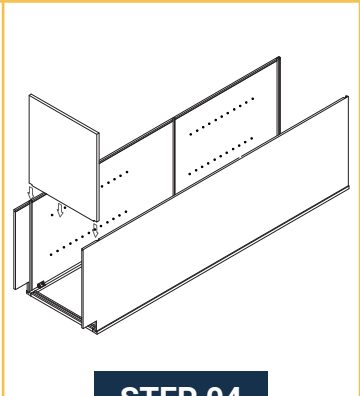


STEP 04

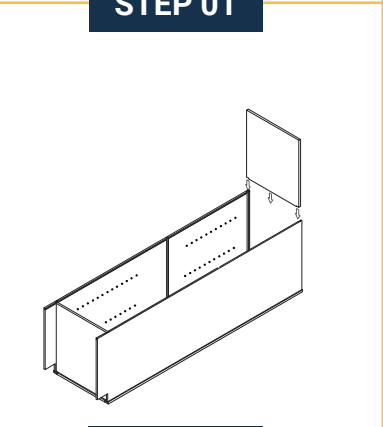


STEP 05

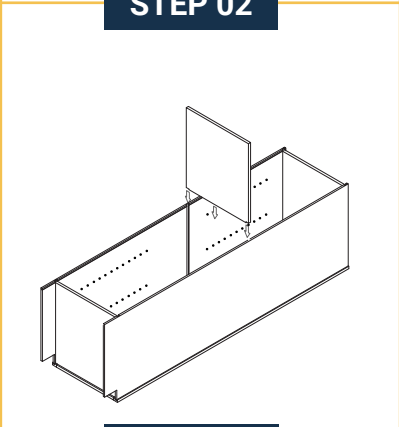


STEP 06

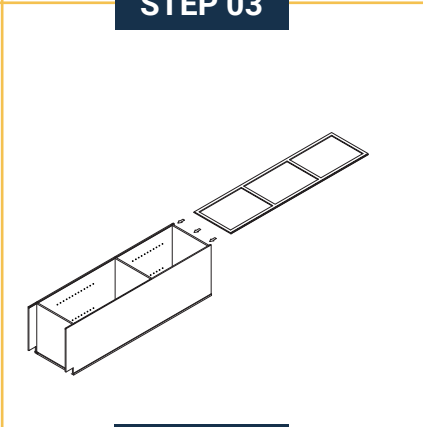


STEP 07

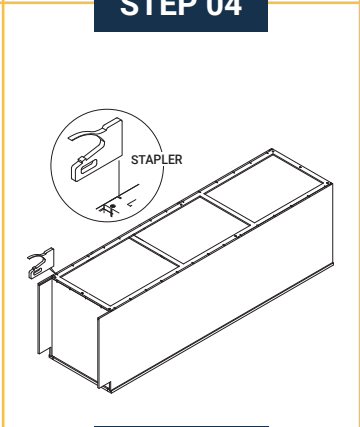

STEP 08

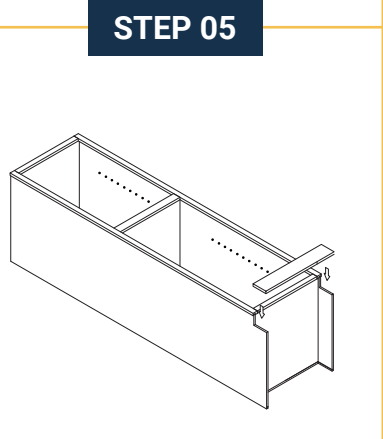


STEP 09

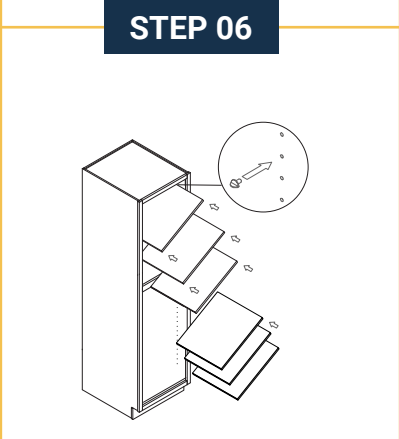

STEP 10







STEP 11

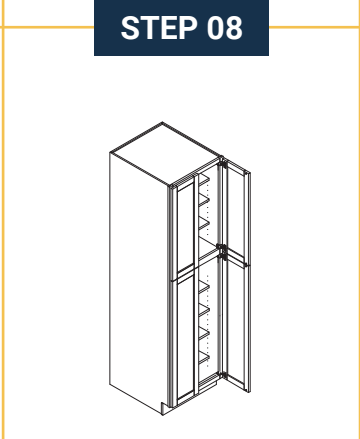





STEP 12









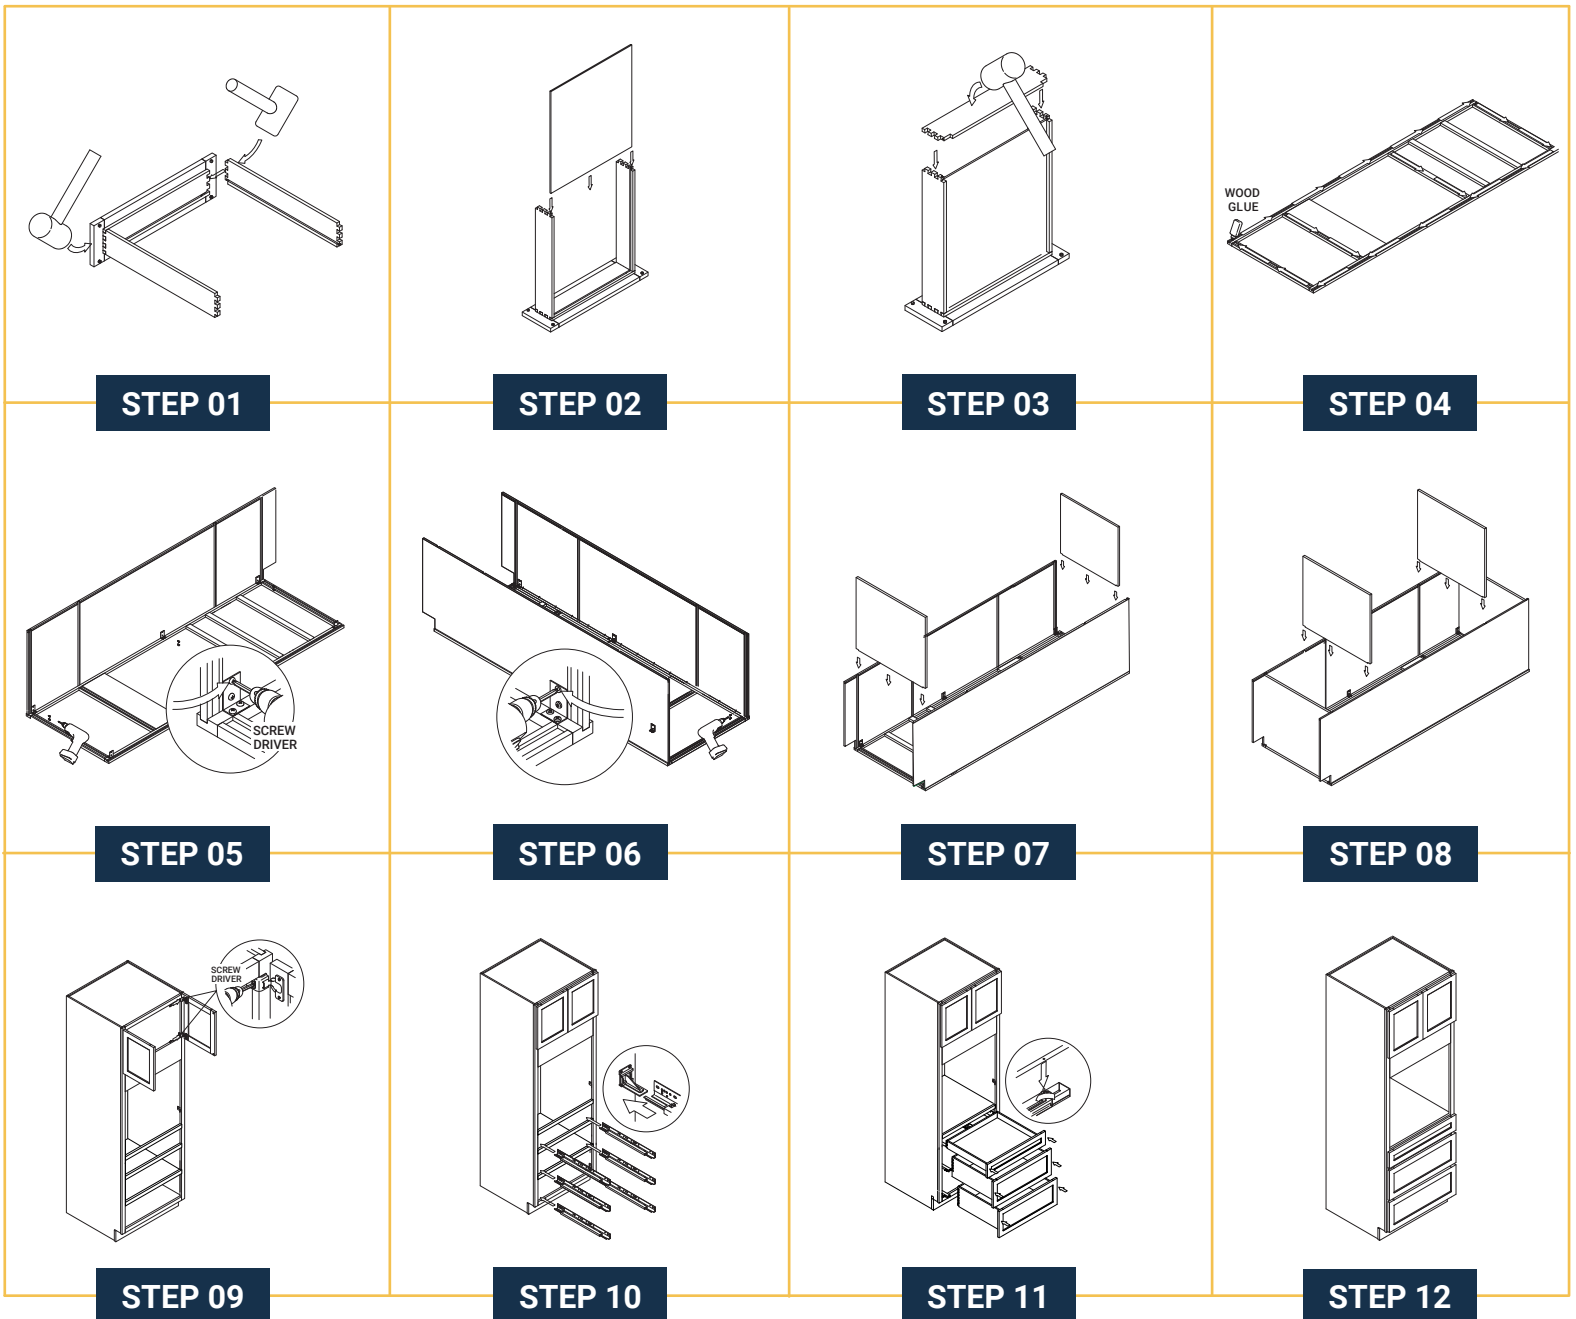
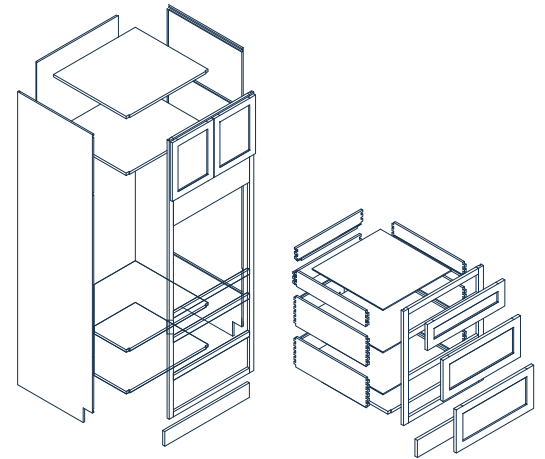
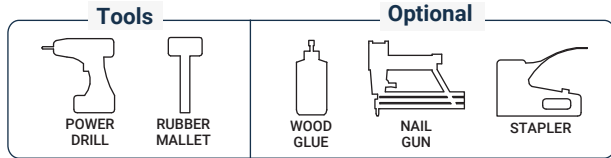
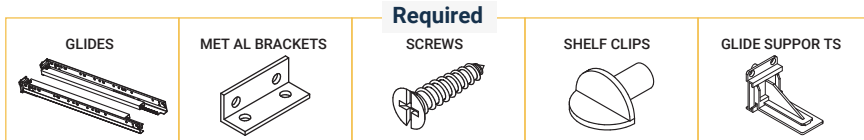
Oven Cabinet



Vanity Cabinet

Required				
GLIDES 	MET AL BRACKETS 	SCREWS 	SHELF CLIPS 	GLIDE SUPPORTS 
Tools		Optional		
POWER DRILL 	RUBBER MALLET 	WOOD GLUE 	NAIL GUN 	STAPLER 

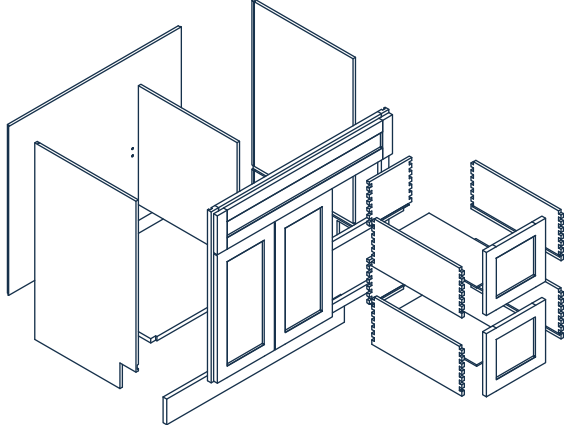

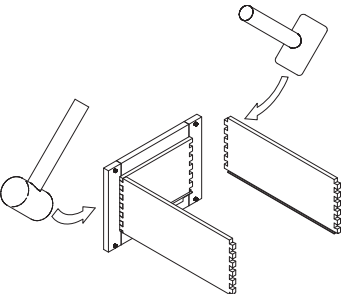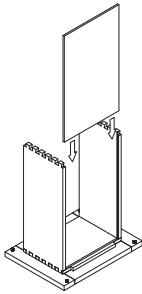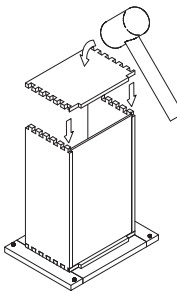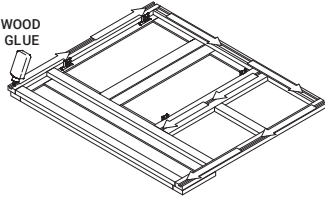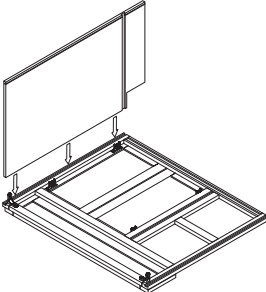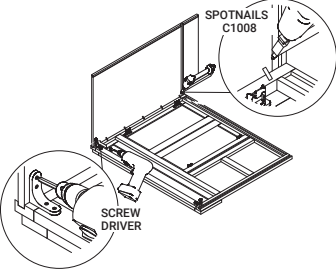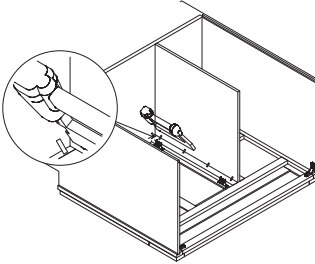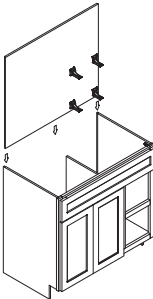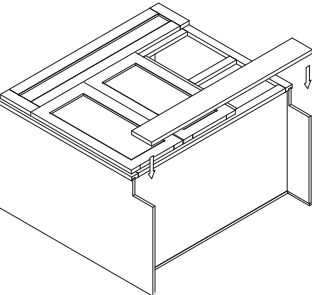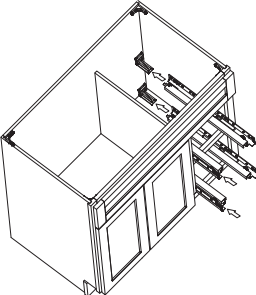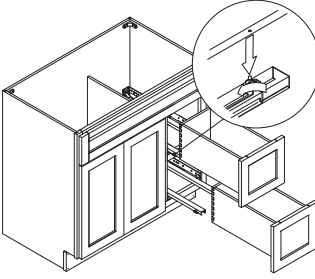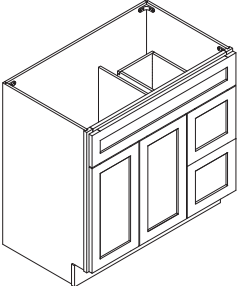			
STEP 01	STEP 02	STEP 03	STEP 04
	 <p>SPOTNAILS C1008</p> <p>SCREW DRIVER</p>		
STEP 05	STEP 06	STEP 07	STEP 08
			
STEP 09	STEP 10	STEP 11	STEP 12